

TERMINAL REMOVAL TOOL

DP # 12094430

DP # 12094429

• REFER TO TOOL CROSS REFERENCE FOR SPECIFIC USES.



EXAMPLES


IF APPLICABLE , REMOVE CPA'S, TPA'S OR UNLOCK SECONDARY LOCK(S) USING THE APPROPRIATE TOOL.

DO NOT USE THE TERMINAL REMOVAL TOOL FOR THIS


1 STEP - DAMAGE TO THE TOOL MAY RESULT.



OR

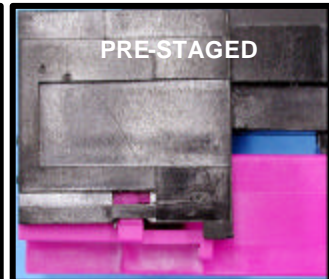

GRASP THE LEAD AND **PUSH** THE TERMINAL FORWARD IN ORDER TO RAISE THE LOCK TANG OFF THE CONNECTOR **2** SHOULDER.

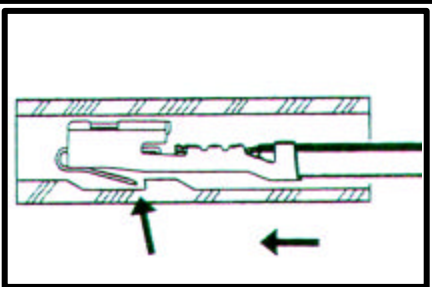


LOCATE TERMINAL LOCK TANG BY LOCATING THE CONNECTOR CANAL AT THE **FRONT (MATING END)** OF THE CONNECTOR CAVITY.

3



INSERT THE TERMINAL REMOVAL TOOL **STRAIGHT** INTO THE CONNECTOR CANAL AT THE **FRONT (MATING END)** OF THE CONNECTOR. LOCK TANG WILL DEPRESS


4 TO UNSEAT TERMINAL.

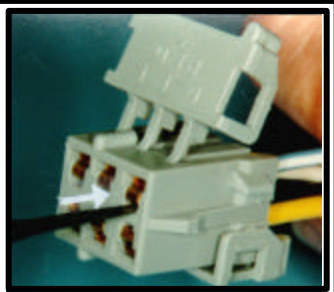

REMOVE THE TOOL.

GENTLY **PULL** ON THE CABLE TO REMOVE THE TERMINAL THROUGH THE **BACK (WIRE SIDE)** OF THE CONNECTOR.


5 **NEVER USE FORCE** TO PULL THE TERMINAL OUT OF THE CONNECTOR.

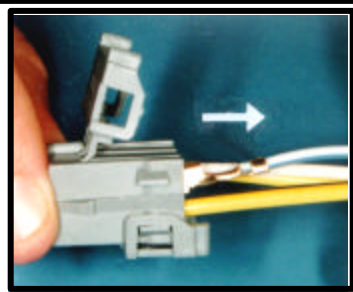

VISUAL FOR TERMINAL & CONNECTOR DAMAGE. REPLACE IF NECESSARY.

IF APPLICABLE, INSERT CPA'S & TPA'S OR LOCK SECONDARY LOCK(S) AFTER

6 REPAIR HAS BEEN MADE.

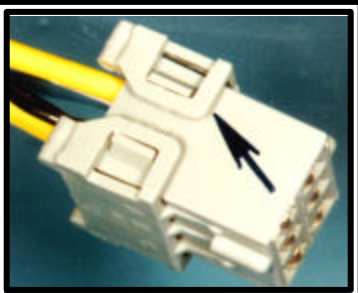

* DENOTES REVISION

DIVISIONAL ASSEMBLY REPAIR MANUAL	DATE ISSUED	DATE REVISED	REVISED BY	APPROVED BY
SECTION: IV	3-1-83	* 11-30-02	Bill James	Robert Meyer